

# Beacon

## Instruction Manual



CE

Doc. no.: 16297026-01\_A\_en  
Date of release: 2022.07.06

---

**Copyright**

The contents of this manual are the property of Struers ApS.  
Reproduction of any part of this manual without the written  
permission of Struers ApS is not allowed.

All rights reserved. © Struers ApS 2022.10.06.

---

# Table of Contents

<b>1</b>	<b>About this manual</b> .....	<b>4</b>
<b>2</b>	<b>Safety</b> .....	<b>5</b>
2.1	Intended use .....	5
2.2	Beacon safety precautions .....	5
2.2.1	Read carefully before use .....	5
<b>3</b>	<b>Getting started</b> .....	<b>5</b>
3.1	Device description .....	5
3.2	Overview .....	6
<b>4</b>	<b>Installation</b> .....	<b>6</b>
4.1	Installing the beacon on the machine .....	6
<b>5</b>	<b>Disposal</b> .....	<b>7</b>
<b>6</b>	<b>Technical data</b> .....	<b>7</b>
6.1	Technical data - Beacon .....	7
<b>7</b>	<b>Distributor</b> .....	<b>8</b>

# 1 About this manual

## Instruction Manuals

Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.



**Note**

Read the instruction manual carefully before use.



**Note**

If you wish to view specific information in detail, see the online version of this manual.

## 2 Safety

### 2.1 Intended use

The beacon is intended to indicate the operational state of Struers machines using light and sound.

### 2.2 Beacon safety precautions

#### 2.2.1 Read carefully before use

Ignoring this information and mishandling of the equipment can lead to severe bodily injuries and material damage.

See the relevant section on the Instruction Manual for the machine on which the beacon is to be installed.

## 3 Getting started


### 3.1 Device description

A beacon consisting of multiple modules (light and/or sound).

Connects to a dedicated connector on Struers equipment.

The beacon is to be mounted on the machine using the provided mounting bracket.

### 3.2 Overview

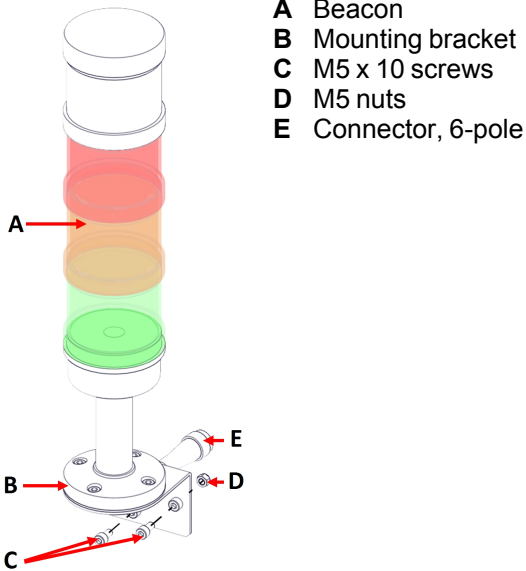

## 4 Installation

### 4.1 Installing the beacon on the machine

See the relevant section on the Instruction Manual for the machine on which the beacon is to be installed.

# 5 Disposal



Equipment marked with a WEEE symbol contains electrical and electronic components and must not be disposed of as general waste.



Contact your local authorities for information on the correct method of disposal in accordance with national legislation.

For disposal of consumables and recirculation fluid, follow local regulations.

# 6 Technical data

## 6.1 Technical data - Beacon

Subject	Specifications	
Power supply	24 V D/C	
Noise level	Volume (max) at 1m distance 85,0 dB (A)	
Operating environment	Surrounding temperature	5 – 40°C/41 – 104°F
	Humidity	< 85 % RH non-condensing

Subject	Specifications	
<b>Storage and transport conditions</b>	Surrounding temperature	0 – 60°C/32 – 140°F
	Humidity	< 85 % RH non-condensing
<b>Dimensions and weight</b>	Diameter	70 mm (28")
	Height	370 mm (14.5")
	Weight	0.5 kg (1 lb)
<b>REACH</b>	For information about REACH, contact your local Struers office.	

# 7 Distributor

Struers ApS  
Pederstrupvej 84  
DK-2750 Ballerup, Denmark  
Telephone: +45 44 600 800  
Fax: +45 44 600 801  
[www.struers.com](http://www.struers.com)





