

# LaboDoser-10

**Instruction Manual** 

**Original Instructions** 



 $\epsilon$ 

Doc. no.: 16377026-02\_A\_en-us Date of release: 2023.01.12

### Copyright

The contents of this manual are the property of Struers ApS. Reproduction of any part of this manual without the written permission of Struers ApS is not allowed.

All rights reserved. © Struers ApS 2023.01.13.

# **Table of Contents**

1	About this manual					
2	Getting started					
	2.1	Device description	4			
	2.2	Check the packing list	5			
	2.3	Unpack the machine	5			
3	Installation					
4	Operating LaboDoser-10					
5	Changing lubricant/suspension					
6	Maintenance and service					
7	Manufacturer					

### 1 About this manual

#### **Instruction Manuals**

Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.



#### Note

Read the Instruction Manual carefully before use.




#### Note

If you wish to view specific information in detail, see the online version of this manual.

# 2 Getting started

# 2.1 Device description

#### LaboDoser-10 mounted on LaboPol

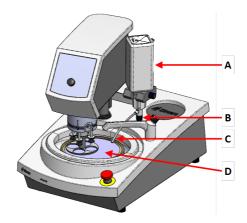

- A LaboDoser-10 suspension/lubricant bottle
- **B** Adjustable valve
- c Dosing nozzle
- D Preparation disc

#### LaboDoser-10 mounted on a LaboDoser-10 table stand



# 2.2 Check the packing list

The packing box contains the following items:

Pcs.	Description			
1	LaboDoser-10 unit with1 liter bottle			
1	Allen key 3 mm			
1	Bracket for doser arm			
2	Hexagonal socket screws			
1	Instruction Manual set			

# 2.3 Unpack the machine



#### Note

We recommend that you keep all original packaging and fittings for future use.

- 1. Cut the packing tape on the top of the box.
- 2. Remove the loose parts.
- 3. Remove the unit from the box.

# 3 Installation



#### Hint


If lubricant or suspension is not to be used for a prolonged period of time, remove the bottle from the bottle holder and store it upright.

LaboDoser-10 can be mounted on the column of the following units:

- LaboUI
- LaboForce-50
- LaboForce-Mi

#### **Procedure**

- A Suspension/lubricant bottle
- **B** Doser arm
- c Adjustable valve
- D Dosing nozzle

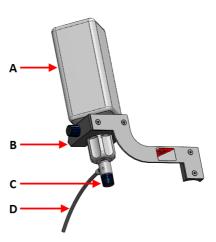

- Use the bracket and the two screws to mount the dosing arm on the column of the machine.
- 2. Attach the bottle cap with adjustable valve onto a Struers suspension/lubricant bottle.
- 3. Insert the bottle into the doser arm.

# 4 Operating LaboDoser-10

The operator adjusts a valve to deliver the required amount of suspension or lubricant on the preparation disc.

- 1. Place the dosing nozzle in the optimal position over the preparation disc.
- 2. Open the valve and adjust the suspension/lubricant dosing level.
- When the preparation step has been completed, close the valve to stop dosing.

# 5 Changing lubricant/suspension

Struers recommends using a separate bottle cap for each consumable.

To use the bottle cap with another consumable:

- 1. Remove the bottle.
- 2. Hold the bottle firmly and remove the bottle cap.
- 3. Empty the bottle and fill it with a mild soap solution.
- 4. Open the valve and clean the dosing nozzle.
- Exchange the soap water with clean water and repeat the above procedure.
- 6. Put the bottle cap on a Struers lubricant/suspension bottle.

## 6 Maintenance and service

#### Technical questions and spare parts

If you have technical questions or when you order spare parts, state serial number and voltage/frequency. The serial number and the voltage are stated on the type plate of the machine.

# 7 Manufacturer

Struers ApS Pederstrupvej 84 DK-2750 Ballerup, Denmark Telephone: +45 44 600 800

Fax: +45 44 600 801 www.struers.com

#### Responsibility of the manufacturer

The following restrictions should be observed, as violation of the restrictions may cause cancellation of Struers legal obligations.

The manufacturer assumes no responsibility for errors in the text and/or illustrations in this manual. The information in this manual is subject to change without notice. The manual may mention accessories or parts not included in the supplied version of the equipment.

The manufacturer is to be considered responsible for effects on safety, reliability, and performance of the equipment only if the equipment is used, serviced, and maintained in accordance with the instructions for use.



- en For translations see
- bg За преводи вижте
- cs Překlady viz
- da Se oversættelser på
- de Übersetzungen finden Sie unter
- el Για μεταφράσεις, ανατρέξτε στη διεύθυνση
- es Para ver las traducciones consulte
- et Tõlked leiate aadressilt
- fi Katso käännökset osoitteesta
- fr Pour les traductions, voir
- hr Za prijevode idite na
- hu A fordítások itt érhetők el
  - it Per le traduzioni consultare
- ja 翻訳については、
- It Vertimai patalpinti
- lv Tulkojumus skatīt
- nl Voor vertalingen zie
- no For oversettelser se
- pl Aby znaleźć tłumaczenia, sprawdź
- pt Consulte as traduções disponíveis em
- ro Pentru traduceri, consultați
- se För översättningar besök
- sk Preklady sú dostupné na stránke
- sl Za prevode si oglejte
- tr Çeviriler için bkz
- zh 翻译见

www.struers.com/Library