


99 steps ahead!

Outperforms more than 100 pieces
of SiC Paper or Foil

- Long lifetime – minimum waste
- Perfect planeness and edge retention
- Constant high material removal

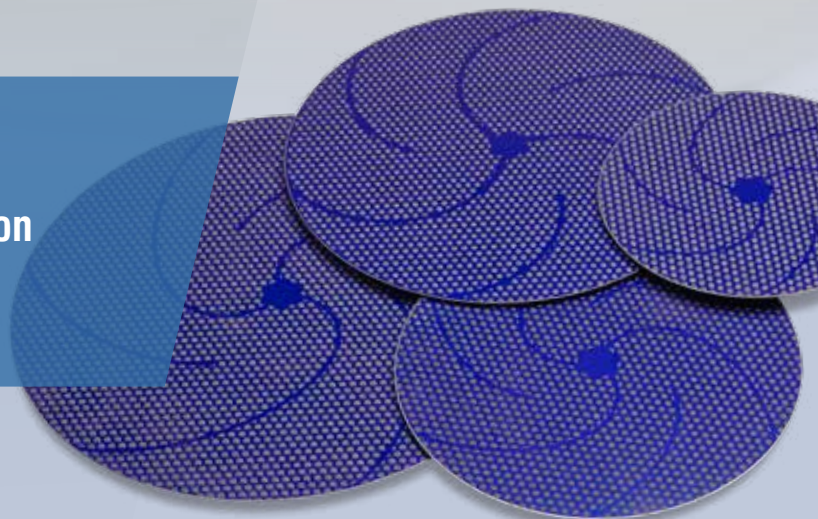

Long lifetime – perfect planeness – high material removal


Plane grinding of titanium alloys usually takes place using SiC Paper; however, achieving perfect edge retention, maximum planeness and consistent results is not always easy. SiC Paper wears quickly – meaning frequent paper changes and a longer working process.

MD-Mezzo 220 disc is ideal for plane grinding of titanium alloys and can be used instead of SiC Paper or Foil #220. The following preparation steps are the same, except from the fine grinding step on MD-Largo, which can be shortened as the specimens already are completely flat after plane grinding.

Made with resin bonded diamonds, MD-Mezzo has a lifetime of more than 100 pieces of SiC Paper guaranteeing a high removal rate and continuously short grinding times.

Planeness of MD-Mezzo 220 versus SiC Paper #220

Results after fine grinding on MD-Largo with DiaPro Allegro/Largo

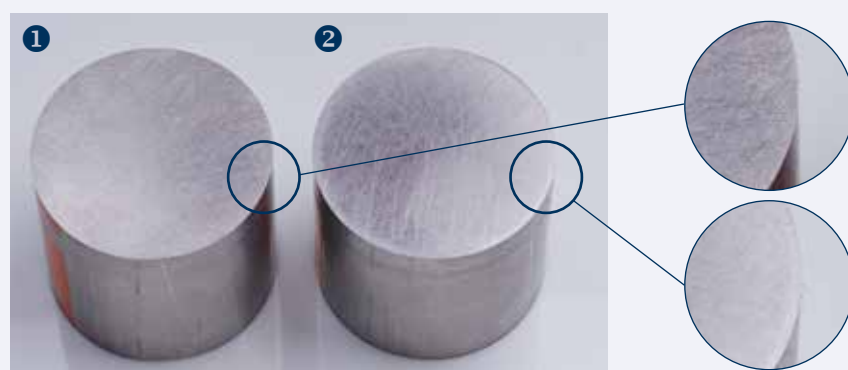

❶ The surface of the specimen ground using MD-Mezzo is completely flat.

❷ The surface of the specimen ground using SiC Paper still shows clear signs of edge rounding, even after fine grinding.

Step	PG	FG	OP
Surface	MD-Mezzo 220	MD-Largo	MD-Chem
Lubricant / Suspension	Water	DiaPro Allegro/Largo 9 µm	OP-S**
rpm	300	150	150
Force N / Specimen	40*	30	30
Time	Until plane	5 min.	5 min.

* 25 N for individual mounted specimens.

** Mix 90 ml OP-S with 10 ml H₂O₂ (30%).

SPECIFICATIONS

Resin bonded diamond grinding disc for plane grinding of titanium alloys. Surface finish comparable to SiC Paper/Foil #220. For magnetic fixation on MD-Disc.

	Cat. no.
200 mm (8") dia.	40800191
250 mm (10") dia.	40800192
300 mm (12") dia.	40800193
350 mm (14") dia.	40800194

Buy your consumables in Struers e-Shop! e-shop.struers.com

Struers' products are subject to constant product development. Therefore, we reserve the right to introduce changes in our products without notice.

Struers ApS

Pederstrupvej 84
 DK-2750 Ballerup, Denmark
 Phone +45 44 600 800
 Fax +45 44 600 801
struers@struers.dk
www.struers.com

AUSTRALIAN & NEW ZEALAND

Struers Australia
 27 Mayneview Street
 Milton QLD 4064
 Australia
 Phone +61 7 3512 9600
 Fax +61 7 3369 8200
info.au@struers.dk

BELGIUM (Wallonie)

Struers S.A.S.
 370, rue du Marché Rollay
 F- 94507 Champigny
 sur Marne Cedex
 Téléphone +33 1 5509 1430
 Télécopie +33 1 5509 1449
struers@struers.fr

BELGIUM (Flanders)

Struers GmbH Nederland
 Zomerdijk 34 A
 3143 CT Maassluis
 Telefoon +31 (10) 599 7209
 Fax +31 (10) 5997201
netherlands@struers.de

CANADA

Struers Ltd.
 7275 West Credit Avenue
 Mississauga, Ontario L5N 5M9
 Phone +1 905-814-8855
 Fax +1 905-814-1440
info@struers.com

CHINA

Struers Ltd.
 No. 1696 Zhang Heng Road
 Zhang Jiang Hi-Tech Park
 Shanghai 201203, P.R. China
 Phone +86 (21) 6035 3900
 Fax +86 (21) 6035 3999
struers@struers.cn

CZECH REPUBLIC & SLOVAKIA

Struers GmbH Organizační složka
 v dekokotechnický park
 Pilepská 1920,
 CZ-252 63 Roztoky u Prahy
 Phone +420 233 312 625
 Fax +420 233 312 640
czechrepublic@struers.de
slovakia@struers.de

GERMANY

Struers GmbH
 Carl-Friedrich-Benz-Straße 5
 D- 47877 Willich
 Telefon +49 (0) 2154 486-0
 Fax +49 (0) 2154 486-222
verkauf@struers.de

FRANCE

Struers S.A.S.
 370, rue du Marché Rollay
 F-94507 Champigny
 sur Marne Cedex
 Téléphone +33 1 5509 1430
 Télécopie +33 1 5509 1449
struers@struers.fr

HUNGARY

Struers GmbH
 Magyarországi Fióktelep
 Tatai út 53
 2821 Gyermely
 Phone +36 (34) 880546
 Fax +36 (34) 880547
hungary@struers.de

IRELAND

Struers Ltd.
 Unit 11 Evolution @ AMP
 Whittle Way, Catcliffe
 Rotherham S60 5BL
 Tel. +44 0845 604 6664
 Fax +44 0845 604 6651
info@struers.co.uk

ITALY

Struers Italia
 Via Monte Grappa 80/4
 20020 Arese (MI)
 Tel. +39-02/38236281
 Fax +39-02/38236274
struers.it@struers.it

JAPAN

Marumoto Struers K.K.
 Takanawa Muse Bldg. 1F
 3-14-13 Higashi-Gotanda,
 Shinagawa
 Tokyo
 141-0022 Japan
 Phone +81 3 5488 6207
 Fax +81 3 5488 6237
struers@struers.co.jp

16.04.2018 R02 / 62168506

NETHERLANDS

Struers GmbH Nederland
 Zomerdijk 34 A
 3143 CT Maassluis
 Telefoon +31 (10) 599 7209
 Fax +31 (10) 5997201
netherlands@struers.de

NORWAY

Struers ApS, Norge
 Sjøskogenveien 44C
 1407 Vinterbro
 Telefon +47 970 94 285
info@struers.no

AUSTRIA

Struers GmbH
 Zweigniederlassung Österreich
 Betriebsgebiet Puch Nord 8
 5412 Puch
 Telefon +43 6245 70567
 Fax +43 6245 70567-78
austria@struers.de

POLAND

Struers Sp. z o.o.
 Oddział w Polsce
 ul. Jasnogórska 44
 31-358 Kraków
 Phone +48 12 661 20 60
 Fax +48 12 626 01 46
poland@struers.de

ROMANIA

Struers GmbH, Sucursala Bucuresti
 Str. Preciziei nr. 6R
 062203 sector 6, Bucuresti
 Phone +40 (31) 101 9548
 Fax +40 (31) 101 9549
romania@struers.de

SWITZERLAND

Struers GmbH
 Zweigniederlassung Schweiz
 Weissenbrunnstraße 41
 CH-8903 Birrnsendorf
 Telefon +41 44 777 63 07
 Fax +41 44 777 63 09
switzerland@struers.de

SINGAPORE

Struers Singapore
 627A Aljunied Road,
 #07-08 BizTech Centre
 Singapore 389842
 Phone +65 6299 2268
 Fax +65 6299 2661
struers.sg@struers.dk

SPAIN

Struers España
 Camino Cerro de los Gamos 1
 Building 1 - Pozuelo de Alarcón
 CP 28224 Madrid
 Teléfono +34 917 901 204
 Fax +34 917 901 112
struers.es@struers.es

FINLAND

Struers ApS, Suomi
 Hietalahdenranta 13
 00180 Helsinki
 Puhelin +358 (0)207 919 430
 Faksi +358 (0)207 919 431
finland@struers.fi

SWEDEN

Struers Sverige
 Box 20038
 161 02 Bromma
 Telefon +46 (0)8 447 53 90
 Telefax +46 (0)8 447 53 99
info@struers.se

UNITED KINGDOM

Struers Ltd.
 Unit 11 Evolution @ AMP
 Whittle Way, Catcliffe
 Rotherham S60 5BL
 Tel. +44 0845 604 6664
 Fax +44 0845 604 6651
info@struers.co.uk

USA

Struers Inc.
 24766 Detroit Road
 Westlake, OH 44145-1598
 Phone +1 440 871 0071
 Fax +1 440 871 8188
info@struers.com