



TransPol-5

Portable field microscopes



PSM-10

PSM-5



MoviPol-5

## Battery-powered, portable materialographic equipment

Grinder/polisher  
Electropolisher  
Microscopes with digital camera option

## Fast, perfect replication

Replica foils for any surface  
Replica compound for 3D replicas

# Non-destructive testing

Many applications demand a materialographic preparation and examination without damaging the subject of inspection. This is where non-destructive testing, NDT, is employed.

The usual NDT preparation steps such as grinding, polishing and etching are performed on the part to be examined in a limited area where no damage can be done, for subsequent analysis of the surface.

Non-destructive preparation enables the necessary inspection to be carried out on site, and is particularly suitable for quality checks in power stations, oil platforms, bridges, aircraft etc.

Electrolytic preparation is a particularly fast and efficient method of non-destructive metallographic preparation. It can be applied directly to critical surfaces and is widely used for metal safety inspection, especially for critical parts of larger units, e.g. welds and other joints. The method effectively reveals changes in the microstructure of the metal and so prevents possible damage because of cracks and leaks.

Struers manufactures a complete range of consumables and portable equipment for materialographic non-destructive preparation: from grinding through mechanical and electrolytic polishing/etching and microscopes for inspecting the result.

These tools are supplemented by a wide range of replication products.

**The entire** range of Struers non-destructive preparation products have been designed for field work. The equipment is thus as compact and as light as possible. It is easy to transport and can be used literally under any conditions.

**Replica** methods make it possible to perform the microscopic examination in the laboratory - under perfect working conditions.



# TransPol-5



## Portable grinding and polishing equipment for rugged use

TransPol-5 is a portable, metallographic grinding/ polishing machine built to withstand rugged field conditions.

Access to inspection sites is often restricted. The very compact 32 mm grinding and polishing discs of the Struers grinding/polishing machine, means that e.g. welds in even the most inaccessible places can be dealt with.

## High performance motor

The powerful motor ensures sufficient power working even with the coarsest paper.

The motor has variable speed (0-20,000 rpm) for optimum results.

## Battery or mains powered


An exchangeable battery pack offers up to 1½ hours of continuous battery operation. The battery pack is shared with the MoviPol-5 electropolisher.

Battery pack and charger are included.

## All accessories included

All necessary accessories are included, and are easily stored in the hold of the carrying case. Here, there is also plenty of storage space for all consumables needed for the preparation.

The portable grinder/polisher comes with both an angled and a straight handle, and exchangeable rubber discs, for support of the grinding paper and polishing cloth discs.

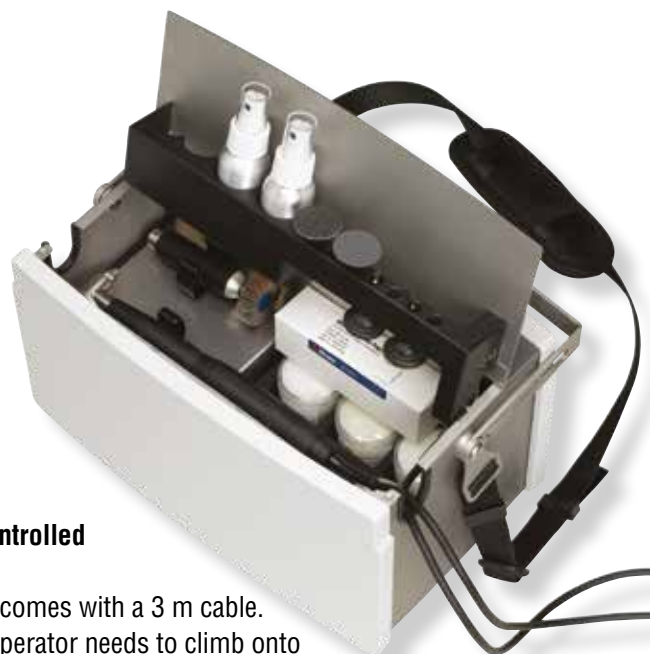

## Remote-controlled operation

TransPol-5 comes with a 3 m cable.

When the operator needs to climb onto e.g. a ladder, the carrying case can stay on the ground, while the grinding/polishing unit is remote-controlled from the elevated position.

## Consumables

A wide range of grinding and polishing consumables are available for TransPol-5; grinding and polishing discs as well as flapper wheels (see back of brochure for details).



**TransPol-5 and MoviPol-5 ensure perfectly prepared surfaces in the field**

# MoviPol-5

## Electrolytic polishing and etching in the field

MoviPol-5 is a portable electrolytic metal polishing and etching machine. It is compact and robust and can be used anywhere.

## Ultrafast results

In less than one minute, a surface is obtained, which is ready for analysis, either on-site or by means of replica for laboratory examination.

## Automatic polishing and etching

Activating the polishing pistol starts an electrolytic reaction. After completion of the polishing step, MoviPol-5 automatically proceeds to the etching process.

## Complete Freedom

MoviPol-5 is equipped with a rechargeable battery pack offering up to 1½ hours of uninterrupted battery operation. This makes MoviPol-5 ideal for field work. For extended hours in the field, both battery pack and electrolyte cartridge are replaced in seconds. For lab work, MoviPol-5 can be connected to the mains via the battery charger (included).

The high-performance battery pack is shared with TransPol-5.\*

## Built-in process light

Frequently, electropolishing is carried out in poorly lit environments. The built-in LED light ensures optimum visual control of the polishing/etching process.

## Method database

MoviPol comes with a method database for popular materials. This means that the customer does not have to start from scratch, but has something to start on. The method database ensures uniform results and repeatability. Totally, up to 20 methods can be stored in the database.

## Electrolyte cartridge system

Refilling of electrolyte can be a messy affair. This is why we have introduced the exchangeable electrolyte cartridge. Instead of refilling a container, the entire cartridge is replaced in seconds – without spilling a drop. In this fashion, refilling can be done in the comfort of the lab, without wasting any precious field time.

\* Battery pack must be inserted for mains usage.



*Built-in LED light ensures optimum visual control*



*Exchangeable electrolyte cartridge*

## Peristaltic pump for work in any position

Movipol-5's peristaltic pump ensures a steady flow of electrolyte even when working e.g. under up.

## Safety features

A non-return valve ensures that the electrolyte flows only during actual operation.

A tilt-sensor warns the operator if the MoviPol-5 is tilted more than 45 degrees, meaning risk of spilling electrolyte. MoviPol-5 is made in compliance with the international safety standard EN60204.

## PSM-5 / PSM-10



### Portable field microscopes

The PSM-5 and PSM-10 are compact and portable microscopes for use in the field.

PSM-5 provides up to 400x magnification, and PSM-10 up to 600x.

Both are ideal for examination of prepared surfaces provided by TransPol-5 and Movipol-5.

A replica is recommended for a more detailed analysis in the lab. The microscopes are used for preliminary examination of the replica.

### Battery-powered LED light

The powerful LED light is battery-fuelled and so has no need for external power supply.

Both models are supplied with a 10x eyepiece and a 10x objective lens, combined providing a 100x magnification.

### Objective lenses

20x and 40x objective lenses are available for both microscopes. Extreme magnification is achieved with a 60x objective lens, available exclusively for the PSM-10.

## Microscopes for field inspection of prepared surfaces and replicas



*PSM-5/-10 and the digital camera are all supplied in transport cases*

### Digital camera

To capture results in the field, a high-quality digital camera option is available. The camera lets you choose between three power sources and includes all accessories.

### Measuring eyepiece and Plate micrometer

For calibrated measurements, a Measuring eyepiece and a Plate micrometer are optionally available.

### Magnetic Cross table

The magnetic cross table option is ideal for inspection of tubes and other convex surfaces. Activating the magnetic clamp, the microscope is easily attached to any ferrous workpiece. This option is available for PSM-10 only.

### Tripod base for curved surfaces

The standard, low tripod base of PSM-10 can be replaced by a tall tripod base, when the microscope is used on curved surfaces.

### Round base

Round base for PSM-10. For use on flat surfaces.

### Aluminium transport case

Both microscopes and Camera option are supplied in aluminium transport cases.



*Objective lenses*



*Camera with adapter*



*Round base*



*Magnetic Cross Table*

# Transcopy




## Transcopy Replica Foil

Transcopy Replica Foil is used to make a replica of any polished and etched surface. The foil is particularly useful when micrographs of an on-site prepared structure is required, or analysis using a portable microscope is insufficient.

Transcopy Replica Foil creates a permanent replication of microstructures, cracks and defects for future analysis and comparison in the laboratory.

## Function

Transcopy Replica Foil consists of reflecting plastic film with a self-adhesive back. A replica is made by applying Transcopy fluid to the film and pressing it firmly onto the prepared and etched surface. A slightly over-etched structure results in a higher contrast of the replica. After 4-5 minutes the foil is removed from the surface. By removing the cover paper, the replica can be adhered to a plain plate and then examined under an optical microscope.

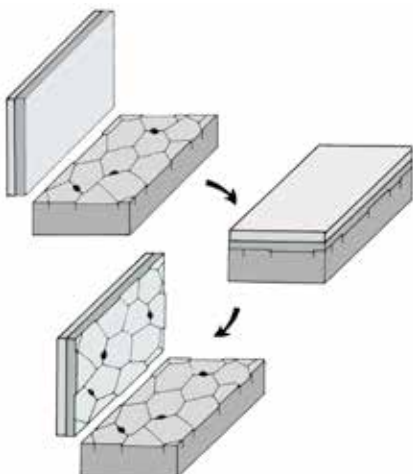

# RepliSet

## 3D replication compound

The RepliSet system is designed to produce an exact 3D copy of a surface. It is used for NDT and field applications allowing the structure or irregularities on critical components to be examined and measured under laboratory conditions.


RepliSet is a specially formulated, fast curing two-part silicone rubber with a good releasing ability for flexible high-resolution 3D replicas, which behave like a metallic surface when examined in an optical microscope. RepliSet compounds are supplied in cartridges and are dispensed using a hand-operated dispensing gun. The application system offers superior and fast results, regardless of the conditions.

RepliFix can be used separately for moulding of surface shapes for low tech applications, or as support for a RepliSet or RepliFix replica, and serves to maintain the original profile and a flat back to the replica.

A replica can be taken from all metallic materials and most other solid materials like ceramics, plastics and glass. There are no size, shape or thickness limitations on the replicas that can be made and it is even possible to take replicas from otherwise inaccessible surfaces. The RepliSet system can produce replicas, which at the same time are dimensionally correct, with ultra fine detail reproduction and with a flat back.

Further to examination by optical microscopes, 3D examination can be carried out using non-contact measuring instruments such as laser measuring equipment or measuring projectors with 2D or 3D facilities. A replica of a cavity, for instance inner holes, can be examined using measurement and profile projectors. The replicas are suitable for 3D examination by SEM.

For field use of the 50 ml RepliSet system, an aluminium transport case is optionally available.

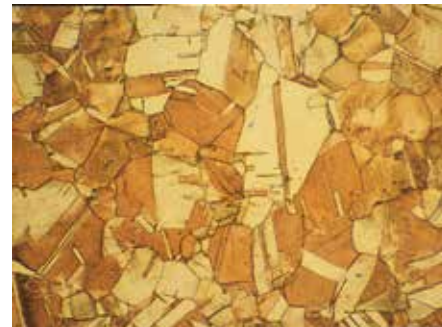

Pure copper. Sample etched with cupric chloride and ammonia. Magnification 100x. Sample



Replica

**Replication means  
100% accurate  
copies for analysis  
in the lab**



## TransPol-5

### Technical Data

Voltages		30V or 100-240V / 50-60Hz
Speed		0-20,000 rpm
Dimensions (without shoulder strap)	Width	358 mm / 14"
	Height	202 mm / 7.9"
	Depth	240 mm / 9.4"
Total weight excl. accessories, excl. charger		6.8 kg / 15 lbs

### Specifications

TransPol-5, portable, metallographic grinding/polishing machine with 3 m connection cable. Battery or mains operation, 30V or 100-240V / 50-60Hz. Complete with shoulder strap, rechargeable battery pack, battery charger, reduction gear unit, straight handle, right angle handle, 4 rubber discs. TransPol-5, 30V or 100-240V / 50-60Hz

### Cat. no.

05976104

### TransPol-5 Battery Charger

Battery charger for TransPol-5 / MoviPol-5

05976117

### TransPol-5 Battery Pack

Rechargeable battery pack for TransPol-5 / MoviPol-5

05966204

SiC grinding papers, adhesive, dia. 32 mm, bundle of 100

Grit 60

40400049

Grit 120

40400129

Grit 240

40400130

Grit 500

40400131

DP cloths, adhesive, dia. 32 mm, bundle of 25

DP-Dur

40500040

DP-Dac

40500145

DP-Mol

40500041

DP-Nap

40500042

OP-Felt

40500043

Flapper wheel, 80 grit, 40 mm dia. x 10 mm

40800053

DP-Lubricant Blue, 1 l

40700005

DP-Lubricant, Red, 1 l

40700025

## MoviPol-5

### Technical Data

Voltage supply to transformer		100-240V / 50-60 Hz
Voltage supply from transformer		30V DC
Thermal overload protection		
Polishing power		Max. 180 W
Polishing area		About 9 mm dia
Dimensions	Width	340 mm / 13.4"
	Height	256 mm / 10"
	Depth	213 mm / 8.4"
Weight, including battery pack and electrolyte cartridge		8.5 kg / 18.7 lbs
Weight, battery pack		0.98 kg / 2 lbs
Volume, electrolyte		0.75 l / 1.3 lbs

### Specifications

MoviPol-5, Portable electrolytic polishing and etching apparatus. Battery or mains operation, 30V or 100-240V / 50-60 Hz. Complete with electrolyte cartridge, external magnetic anode, shoulder strap, rechargeable battery pack and battery charger. Including 10 pcs polishing chambers.

05966104

Polishing Chambers for MoviPol-5, Flexible type, 50 pcs.

03926904

### MoviPol-5 Battery Charger

Battery charger for MoviPol-5 / TransPol-5

05976117

### MoviPol-5 Battery Pack

Rechargeable battery pack for MoviPol-5 / TransPol-5

05966204

Electrolyte cartridge for MoviPol-5

Removable electrolyte container for MoviPol-5

05966030

External etching kit for MoviPol-5

For external etching

05966903

Anode clamping kit for MoviPol-5

For fixation of anode on non-magnetic materials

05966902

## PSM-5 / PSM-10

### Technical data

	PSM-5	PSM-10
Power	Battery, 3V (CR2025)	Battery, 3V (CR2025)
Height incl. eyepiece	210 mm / 8.2"	220 mm / 8.7"
Diameters	25-63 mm / 0.98-2.5"	25-70 mm / 0.98-2.8"
Weight excl. objective lens	473 g / 1 lbs	1100 g / 2.4 lbs

### Specifications

Portable microscope PSM-5

Portable microscope with battery-powered LED illumination.

Complete with 10x eyepiece and 10x objective lens.

Camera option, Camera connection kit, 20x/40x objective lenses,

Measuring eyepiece and Plate micrometer are ordered separately.

04286102

Portable microscope PSM-10

Portable microscope with battery-powered LED illumination.

Complete with 10x eyepiece and 10x objective lens.

Camera option, Camera connection kit, 20x/40x/60x objective lenses,

Magnetic cross table, Measuring eyepiece and Plate micrometer are ordered separately.

04286103

Objective lens 20x, for PSM-5/-10

Objective lens, 20x magnification. For use with PSM-5/-10.

04286910

Objective lens 40x, for PSM-5/-10

Objective lens, 40x magnification. For use with PSM-5/-10.

04286911

Objective lens 60x, for PSM-10

Objective lens, 60x magnification. For use with PSM-10.

04286912

Magnetic cross table, for PSM-10

XY-table with magnetic clamping for PSM-10.

Suitable for inspection of ferrous tubes.

04286913

Measuring eyepiece, for PSM-5/-10

Measuring eyepiece with micrometer scale for PSM-5/-10.

Plate micrometer (04286915) is used for initial calibration.

04286914

Plate micrometer, for PSM-5/-10

Plate micrometer with micrometer scale for PSM-5/-10.

Used with Measuring eyepiece (04286914) for initial calibration.

04286915

Tripod base, for PSM-10. For curved surfaces.

04286918

Digital camera with C-mount, for use with PSM-2/-5/-10. Includes adapter for 23 mm eyepiece, adapter for MoviPol battery pack, AC-adaptor, 12V battery pack, 2 GB SD-card, remote shutter and transport case.

04286919

Round base, for PSM-10. For use on flat surfaces.

04286920

## Transcopy

### Transcopy Kit

Resolution of cured replica:	Better than 1 µm
Shrinkage:	Negligible
Temperature range of the surface to be examined:	10-60°C.

Set consisting of 40 ml Transcopy Liquid, 50 replica foils 20 x 30 mm (0.8" x 1.2"), 1 pipette, spray nozzle and 50 microscope slides 25 x 75 mm (1" x 3")

40900090

Transcopy Replica Foils, 50 pcs.

40900091

Transcopy Liquid, 40 ml

40900092

## RepliSet

### Technical Data


Resolution of cured replica	Down to 0.1 micron
Shrinkage	Negligible
Tear Strength	15-20 kN/m <sup>2</sup>
Temperature range for the surface to be examined	-10°C to +180°C

Life span of the finished replicas is practically indefinite provided they are stored according to the instructions.

Content in static-mixing nozzle	1.1 ml in nozzle for 50 ml cartridge
	9.3 ml in nozzle for 265 ml cartridge

### Specifications

Replication system for non-destructive testing of a microstructure or a 3D structure. Fast curing two-part silicon rubber compound for flexible high-resolution 3D replicas. For the 50 ml system, the hand-operated dispensing gun (40900066) and the static mixing nozzles (40900088) are used in combination with the 50 ml cartridges. For the 265 ml system, the hand-operated dispensing gun (40900065) and the static-mixing nozzles (40900056) are used in combination with the 265 ml cartridges

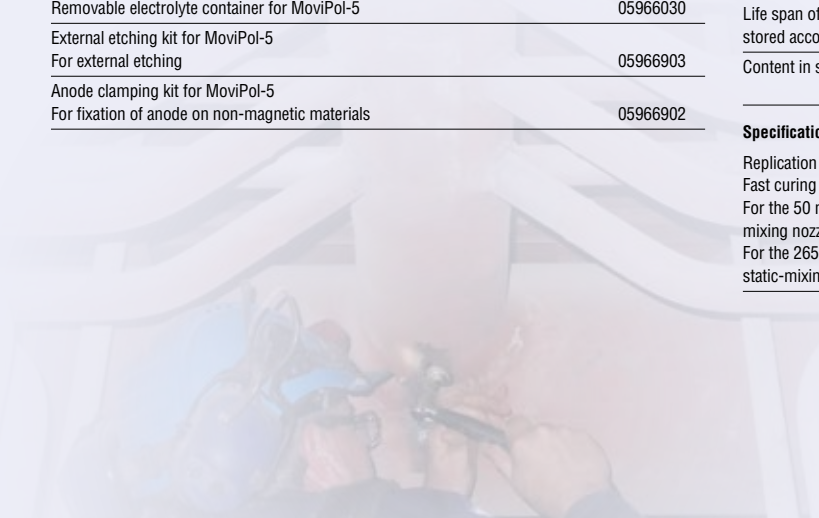

**Specifications**
**Cat. no.**
**RepliSet-F1**

Particularly useful for replicating horizontal or sloping surfaces in low temperature conditions or where rapid results are required. Fluid rapid curing compound with working life of 0.5-1 min. and curing time of 4 min. at 25°C

1 cartridge of 50 ml  
 5 cartridges of 50 ml  
 2 cartridges of 265 ml

40900069  
 40900047  
 40900051

**RepliSet-F5**

General purpose material. Particularly useful for replicating horizontal or sloping surfaces in normal or high temperature conditions. Fluid fast curing compound with working life of 5 min. and curing time of 18 min. at 25°C

1 cartridge of 50 ml  
 5 cartridges of 50 ml  
 2 cartridges of 265 ml

40900068  
 40900046  
 40900050

**RepliSet-T1**

Particularly useful for replicating vertical or overhead surfaces in low temperature conditions or where rapid results are required. Thixotropic rapid curing compound with working life of 0.5-1 min. and curing time of 4 min. at 25°C

1 cartridge of 50 ml  
 5 cartridges of 50 ml  
 2 cartridges of 265 ml

40900071  
 40900049  
 40900053

**RepliSet-T3**

General purpose material. Particularly useful for replicating vertical or overhead surfaces in normal or high temperature conditions. Thixotropic fast curing compound with working life of 3 min. and curing time of 10 min. at 25°C

1 cartridge of 50 ml  
 5 cartridges of 50 ml  
 2 cartridges of 265 ml

40900070  
 40900048  
 40900052

**RepliSet-GF1**

Replication system especially for comparator macroscopy and metrology. Particularly useful for replicating horizontal or sloping surfaces and filling holes. Fluid rapid curing compound with working life of 0.5 - 1 min. and curing time of 4 min. at 25°C.

1 cartridge of 50 ml  
 5 cartridges of 50 ml

40900078  
 40900076

**RepliSet-GT1**

Replication system especially for comparator macroscopy and metrology. Particularly useful for replicating vertical or overhead surfaces. Thixotropic rapid curing compound with working life of 0.5 - 1 min. and curing time of 4 min. at 25°C.

1 cartridge of 50 ml  
 5 cartridges of 50 ml

40900079  
 40900077

**RepliFix**

Specially formulated hand mixed fast curing two-part silicone rubber. Bonds to RepliSet. Particularly useful in combination with RepliSet for producing a rigid backing. It can be used directly for moulding of surface shape for profile measurement

**RepliFix-2**

For low temperature conditions or where rapid results are required. Working life of 2-3 min. and curing time of 10 min. at 25°C. Net 500 g

40900084

**RepliFix-20**

For high temperature conditions or for taking replicas of complicated geometry or large areas. Working life of 20 min. and curing time of 60 min. at 25°C. Net 500 g

40900086

**Accessories**
**Hand-operated dispensing gun**

For 50 ml cartridges of RepliSet  
 For 265 ml cartridges of RepliSet

40900066  
 40900065

**Static-mixing nozzles**

For 50 ml cartridges. 35 pcs.  
 For 265 ml cartridges. 10 pcs.

40900088  
 40900056

**Nozzle Tips**

For replicating flat surfaces. Fishtail spreaders, 10 mm width. To be mounted on 50 ml static mixing nozzle (40900088). 30 pcs.

40900089

For replicating small holes. Luer needle, 1 mm dia., 30 mm long. To be mounted on 50 ml static-mixing nozzle (40900088). 10 pcs.

40900060

For replicating larger holes. Flexible hose, 6 mm dia., 100 mm long. To be mounted on 50 ml static-mixing nozzle (40900088) 10 pcs.

40900061

**Backing Slides**

A flexible plastic slide, which bonds to the replica and ensures a flat back to the replica. For levelling of replicas to assist microscopic examination, as dimensional support for metrology and for well-ordered labelling, transport and storage of RepliSet replicas 26 x 76 x 1 mm, 50 pcs.

40900087

**Backing paper**

For RepliSet replication system. Bonds to the replica and facilitates labelling, handling and the levelling of replicas to assist microscopic examination. 60 x 70 mm. 100 pcs.  
 A4 (210 x 297 mm), for cutting up to the required size. 10 pcs.

40900062  
 40900063

**Case for RepliSet 50 ml system**

Aluminium case with room for all necessities for field applications. The contents of the RepliSet Case is ordered separately

40900067

*Struers' products are subject to constant product development. Therefore, we reserve the right to introduce changes in our products without notice.*

**Struers ApS**

Pederstrupvej 84  
 DK-2750 Ballerup, Denmark  
 Phone +45 44 600 800  
 Fax +45 44 600 801  
 struers@struers.dk  
 www.struers.com

**AUSTRALIAN & NEW ZEALAND**

**Struers Australia**  
 27 Mayneview Street  
 Milton QLD 4064  
 Australia  
 Phone +61 7 3512 9600  
 Fax +61 7 3369 8200  
 info.au@struers.dk

**BELGIUM (Wallonia)**

**Struers S.A.S.**  
 370, rue du Marché Rollay  
 F- 94507 Champigny  
 sur Marne Cedex  
 Téléphone +33 1 5509 1430  
 Télécopie +33 1 5509 1449  
 struers@struers.fr

**BELGIUM (Flanders)**

**Struers GmbH Nederland**  
 Zomerdijk 34 A  
 3143 CT Maassluis  
 Telefoon +31 (10) 599 7209  
 Fax +31 (10) 5997201  
 netherlands@struers.de

**CANADA**

**Struers Ltd.**  
 7275 West Credit Avenue  
 Mississauga, Ontario L5N 5M9  
 Phone +1 905-814-8855  
 Fax +1 905-814-1440  
 info@struers.com

**CHINA**

**Struers Ltd.**  
 No. 1696 Zhang Heng Road  
 Zhang Jiang Hi-Tech Park  
 Shanghai 201203, P.R. China  
 Phone +86 (21) 6035 3900  
 Fax +86 (21) 6035 3999  
 struers@struers.cn

**CZECH REPUBLIC & SLOVAKIA**

**Struers GmbH Organizační složka**  
 v deckotechnický park  
 P. Iľepská 1920,  
 CZ-252 63 Roztoky u Prahy  
 Phone +420 233 312 625  
 Fax +420 233 312 640  
 czechrepublic@struers.de  
 slovakia@struers.de

**GERMANY**

**Struers GmbH**  
 Carl-Friedrich-Benz-Straße 5  
 D- 47877 Willich  
 Telefon +49 (0) 2154 486-0  
 Fax +49 (0) 2154 486-222  
 verkauf@struers.de

**FRANCE**

**Struers S.A.S.**  
 370, rue du Marché Rollay  
 F-94507 Champigny  
 sur Marne Cedex  
 Téléphone +33 1 5509 1430  
 Télécopie +33 1 5509 1449  
 struers@struers.fr

**HUNGARY**

**Struers GmbH**  
 Magyarországi Fióktelep  
 Tatai ut 53  
 2821 Gyermely  
 Phone +36 (34) 880546  
 Fax +36 (34) 880547  
 hungary@struers.de

**IRELAND**

**Struers Ltd.**  
 Unit 11 Evolution@ AMP  
 Whittle Way, Catcliffe  
 Rotherham S60 5BL  
 Tel. +44 0845 604 6664  
 Fax +44 0845 604 6651  
 info@struers.co.uk

**ITALY**

**Struers Italia**  
 Via Monte Grappa 80/4  
 20020 Arese (MI)  
 Tel. +39-02/38236281  
 Fax +39-02/38236274  
 struers.it@struers.it

**JAPAN**

**Marumoto Struers K.K.**  
 Takanawa Muse Bldg. 1F  
 3-14-13 Higashi-Gotanda,  
 Shinagawa  
 Tokyo  
 141-0022 Japan  
 Phone +81 3 5488 6207  
 Fax +81 3 5488 6237  
 struers@struers.co.jp

**NETHERLANDS**

**Struers GmbH Nederland**  
 Zomerdijk 34 A  
 3143 CT Maassluis  
 Telefoon +31 (10) 599 7209  
 Fax +31 (10) 5997201  
 netherlands@struers.de

**NORWAY**

**Struers ApS, Norge**  
 Sjøskogenveien 44C  
 1407 Vinterbro  
 Telefon +47 970 94 285  
 info@struers.no

**AUSTRIA**

**Struers GmbH**  
 Zweigniederlassung Österreich  
 Betriebsgebiet Puch Nord 8  
 5412 Puch  
 Telefon +43 6245 70567  
 Fax +43 6245 70567-78  
 austria@struers.de

**POLAND**

**Struers Sp. z o.o.**  
 Oddział w Polsce  
 ul. Jasnogórska 44  
 31-358 Kraków  
 Phone +48 12 661 20 60  
 Fax +48 12 626 01 46  
 poland@struers.de

**ROMANIA**

**Struers GmbH, Sucursala Bucuresti**  
 Str. Preciziei nr. 6R  
 062203 sector 6, Bucuresti  
 Phone +40 (31) 101 9548  
 Fax +40 (31) 101 9549  
 romania@struers.de

**SWITZERLAND**

**Struers GmbH**  
 Zweigniederlassung Schweiz  
 Weissenbrunnenstraße 41  
 CH-8903 Birmsensdorf  
 Telefon +41 44 777 63 07  
 Fax +41 44 777 63 09  
 switzerland@struers.de

**SINGAPORE**

**Struers Singapore**  
 627A Aljunied Road,  
 #07-08 BizTech Centre  
 Singapore 389842  
 Phone +65 6299 2268  
 Fax +65 6299 2661  
 struers.sg@struers.dk

**SPAIN**

**Struers España**  
 Camino Cerro de los Gamos 1  
 Building 1 - Pozuelo de Alarcón  
 CP 28224 Madrid  
 Teléfono +34 917 901 204  
 Fax +34 917 901 112  
 struers.es@struers.es

**FINLAND**

**Struers ApS, Suomi**  
 Hietalahdenranta 13  
 00180 Helsinki  
 Puhelin +358 (0)207 919 430  
 Faksi +358 (0)207 919 431  
 finland@struers.fi

**SWEDEN**

**Struers Sverige**  
 Box 20038  
 161 02 Bromma  
 Telefon +46 (0)8 447 53 90  
 Telefax +46 (0)8 447 53 99  
 info@struers.se

**UNITED KINGDOM**

**Struers Ltd.**  
 Unit 11 Evolution @ AMP  
 Whittle Way, Catcliffe  
 Rotherham S60 5BL  
 Tel. +44 0845 604 6664  
 Fax +44 0845 604 6651  
 info@struers.co.uk

**USA**

**Struers Inc.**  
 24766 Detroit Road  
 Westlake, OH 44145-1598  
 Phone +1 440 871 0071  
 Fax +1 440 871 8188  
 info@struers.com